






Power Supply

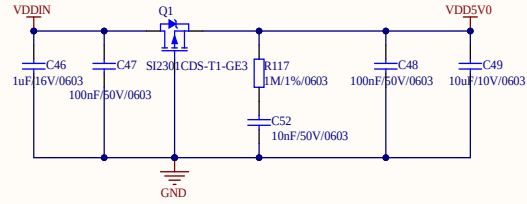




电源按键开关

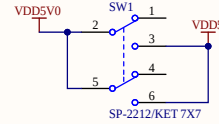


无源晶振 X1/X2

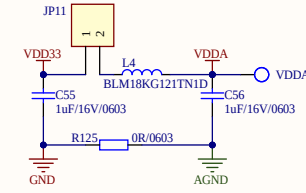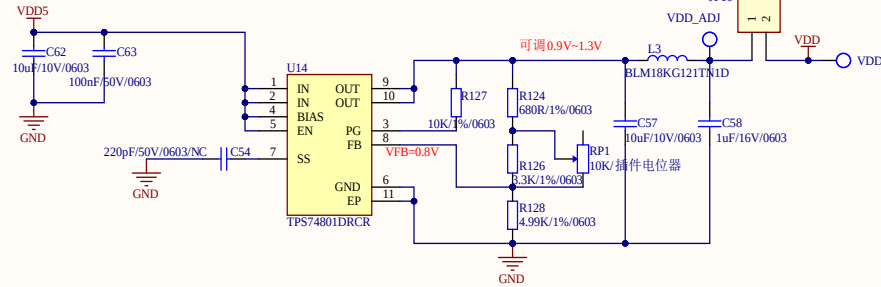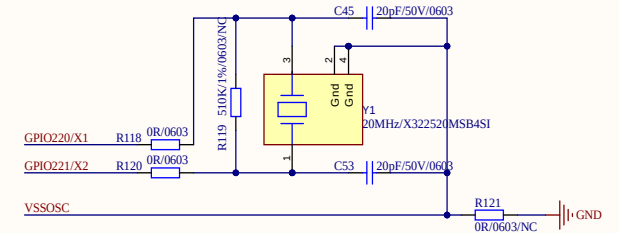




有源晶振 X1

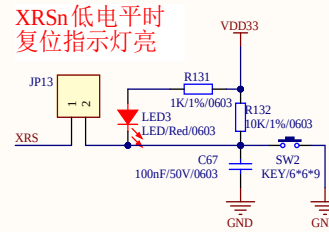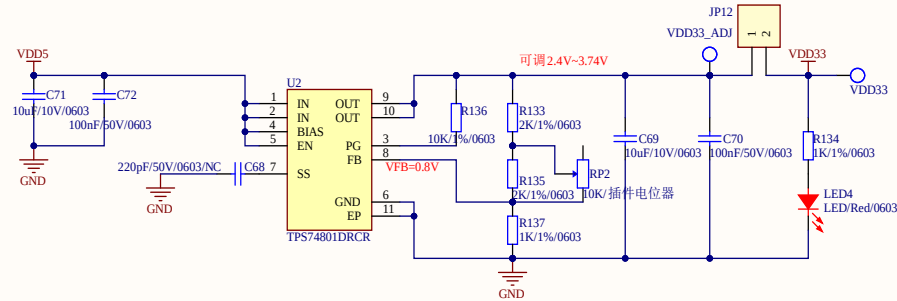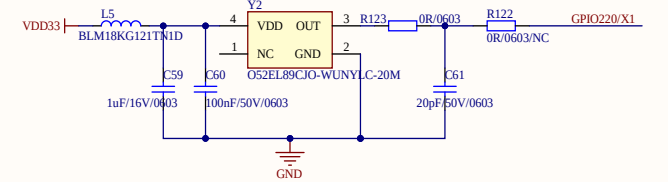

有源晶振 AUXCLK

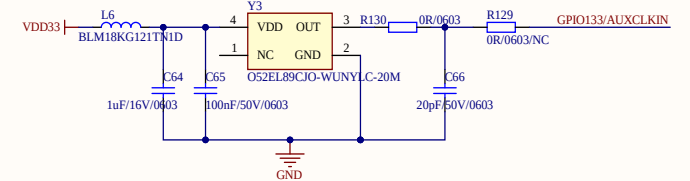




跳线帽选择 VREGENZ

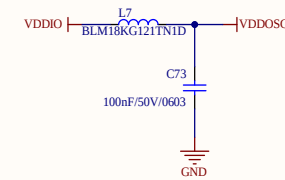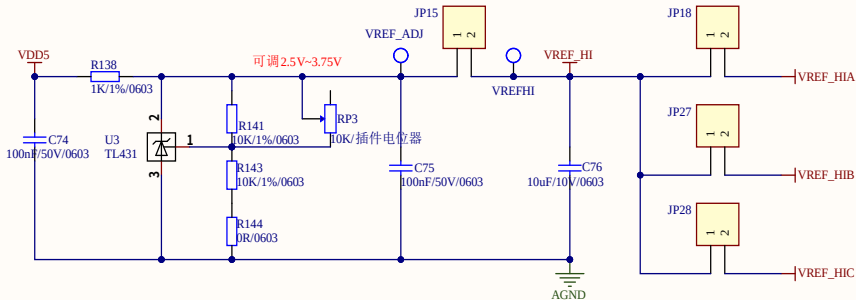

Title		
Xplorer_GS32FP65_POWER		
Size	Number	Revision
A3		
Date:	7/30/2025	Sheet of
File:	D:\Desktop\POWER\SchDoc	Drawn By:


U1A	
GPIO0	160
GPIO1	161
GPIO2	162
GPIO3	163
GPIO4	164
GPIO5	165
GPIO6	166
GPIO7	167
GPIO8	18
GPIO9	19
GPIO10	1
GPIO11	2
GPIO12	4
GPIO13	5
GPIO14	6
GPIO15	7
GPIO16	8
GPIO17	9
GPIO18	10
GPIO19	12
GPIO20	13
GPIO21	14
GPIO22	11
GPIO23	21
GPIO24	159
GPIO25	153
GPIO26	82
GPIO27	125
GPIO28	74
GPIO29	73
GPIO30	79
GPIO31	158
GPIO32	116
GPIO33	69
GPIO34	70
GPIO35	71
GPIO36	83
GPIO37	84
GPIO38	85
GPIO39	86
GPIO40	87
GPIO41	89
GPIO42	130
GPIO43	131
GPIO44	113
GPIO45	115
GPIO46	128
GPIO47	129
GPIO48	90
GPIO49	93
GPIO50	94
GPIO51	95
GPIO52	96
GPIO53	97
GPIO54	98
GPIO55	100
GPIO56	101
GPIO57	102
GPIO58	103
GPIO59	104
GPIO60	105
GPIO61	107
GPIO62	108
GPIO63	109
GPIO64	110
GPIO65	111
GPIO66	112
GPIO67	132
GPIO68	133
GPIO69	134
GPIO70	135
GPIO71	136
GPIO72	139
GPIO73	140
GPIO74	141
GPIO75	142
GPIO76	143
GPIO77	144
GPIO78	145
GPIO79	146
GPIO80	148
GPIO81	149
GPIO82	150
GPIO83	151
GPIO84	154
GPIO85	155
GPIO86	156
GPIO87	157
GPIO88	170
GPIO89	171
GPIO90	172
GPIO91	173
GPIO92	174
GPIO93	175
GPIO94	176
GPIO99	17
GPIO103	126
GPIO104	147
GPIO105	106
GPIO106	20
GPIO133/AUXCLKIN	118

GS32FP65_LQFP176

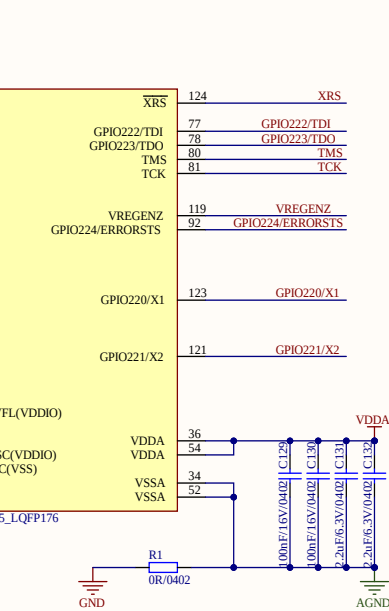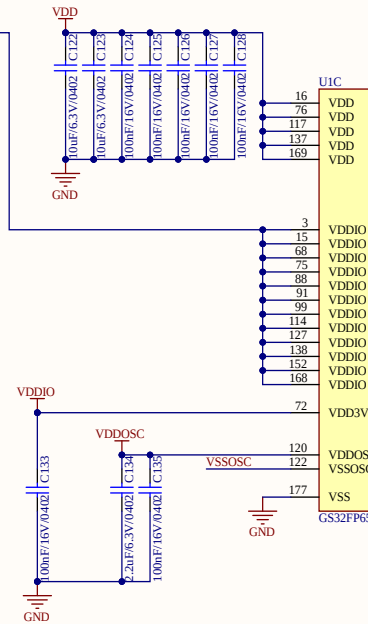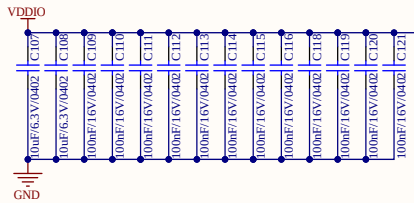


U1B	
A14/B14/C14	44
A15/B15/C15	45
A0	43
A1	42
A2	41
A3	40
A4	39
A5	38
A6/GPIO209	57
A7/GPIO210	58
A8/GPIO211	59
A9/GPIO212	60
A10/GPIO213	62
A11/GPIO214	63
B0	46
B1	47
B2	48
B3	49
B4/GPIO215	64
B5/GPIO216	65
B6/GPIO217	55
B7/GPIO218	56
B8/GPIO219	66
B9/GPIO220	67
B10/GPIO221	61
B11	51
C0/GPIO199	22
C1/GPIO200	23
C2	31
C3/GPIO206	30
C4/GPIO205	29
C5/GPIO204	28
C6/GPIO203	27
C7/GPIO198	26
C8/GPIO202	25
C9/GPIO201	24
A14/B14/C14/AIO225	44
A15/B15/C15/AIO226	45
A0/DACA_OUT/AIO227	42
A1/AIO228	41
A2/AIO229	40
A3/AIO230	39
A4/AIO231	38
A5/AIO232	37
A6/GPIO209	57
A7/GPIO210	58
A8/GPIO211	59
A9/GPIO212	60
A10/GPIO213	62
A11/GPIO214	63
B0/VDAC/AIO233	46
B1/DACC_OUT/AIO234	47
B2/AIO235	48
B3/AIO236	49
B4/GPIO215	64
B5/GPIO216	65
B6/GPIO217	55
B7/GPIO218	56
B8/GPIO219	66
B9/GPIO220	67
B10/GPIO221	61
B11/AIO240	51
C0/GPIO199	22
C1/AIO237	31
C2/AIO237	31
C3/GPIO206	30
C4/GPIO205	29
C5/GPIO204	28
C6/GPIO203	27
C7/GPIO198	26
C8/GPIO202	25
C9/GPIO201	24

GS32FP65_LQFP176

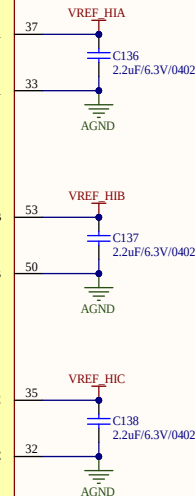


Title		
Xplorer_GS32FP65_MCU		
Size	Number	Revision
A3		
Date:	7/30/2025	Sheet of
File:	D:\Desktop\...\MCU.SchDoc	Drawn By:


跳线帽选择板载调试器或 JTAG 接口

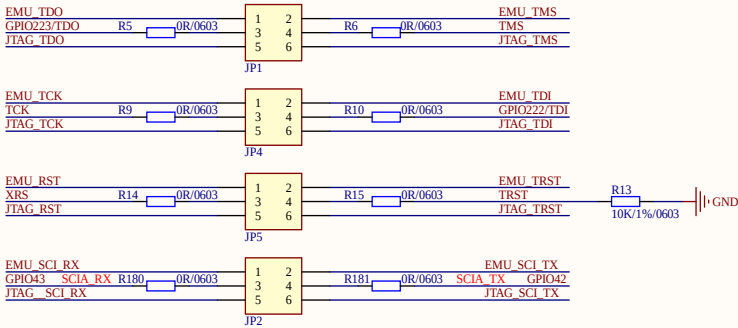


JTAG

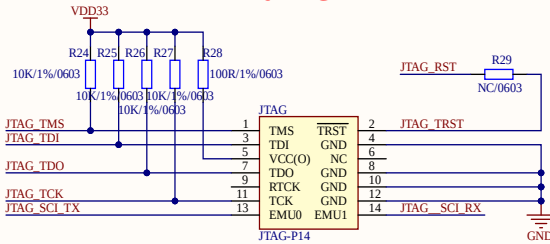

LED

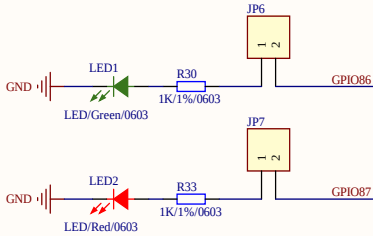

BOOT

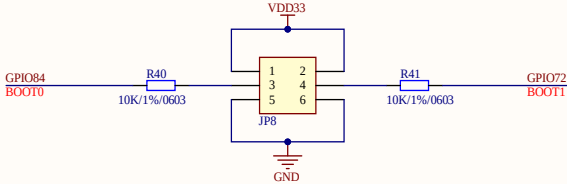



Selected Boot Mode Chart

TRST	GPIO72 BOOT1	GPIO84 BOOT0	
1	x	x	Emulation Boot
0	0	0	Parallel I/O
0	0	1	SCI
0	1	0	Wait
0	1	1	GetMode



Title		
Xplorer_GS32FP65_MCU_ADC		
Size	Number	Revision
A3		
Date:	7/30/2025	Sheet of
File:	D:\Desktop\MCU_ADC.SchDoc	Drawn By:

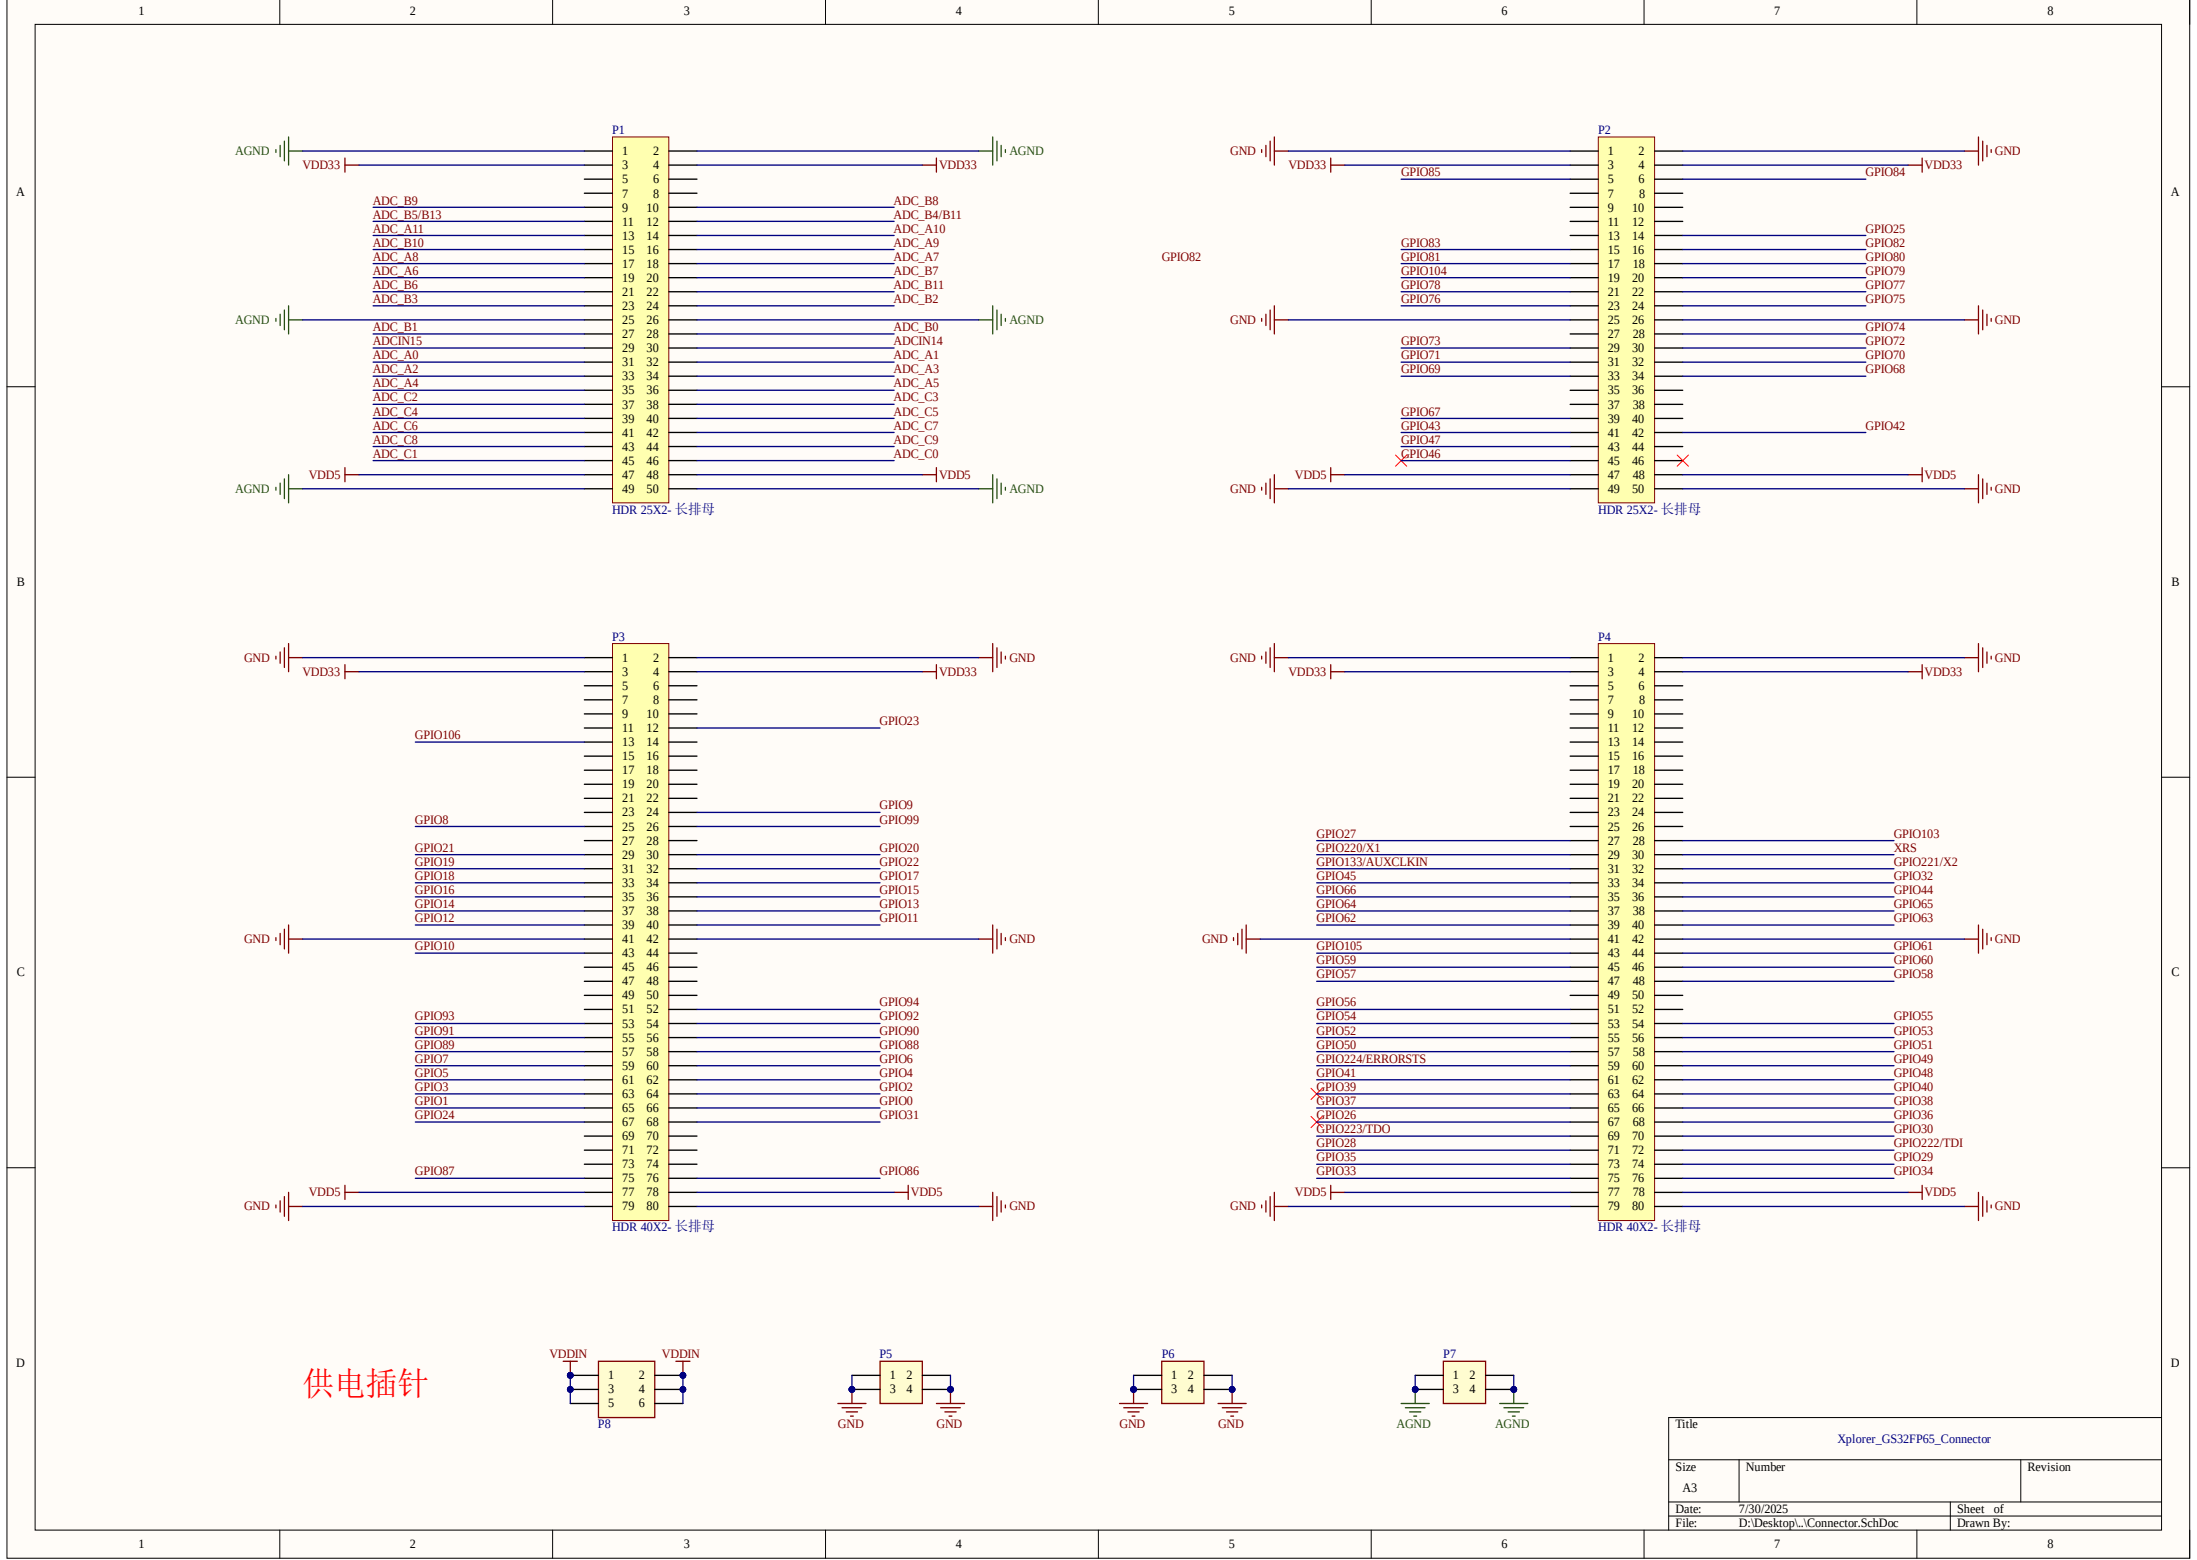

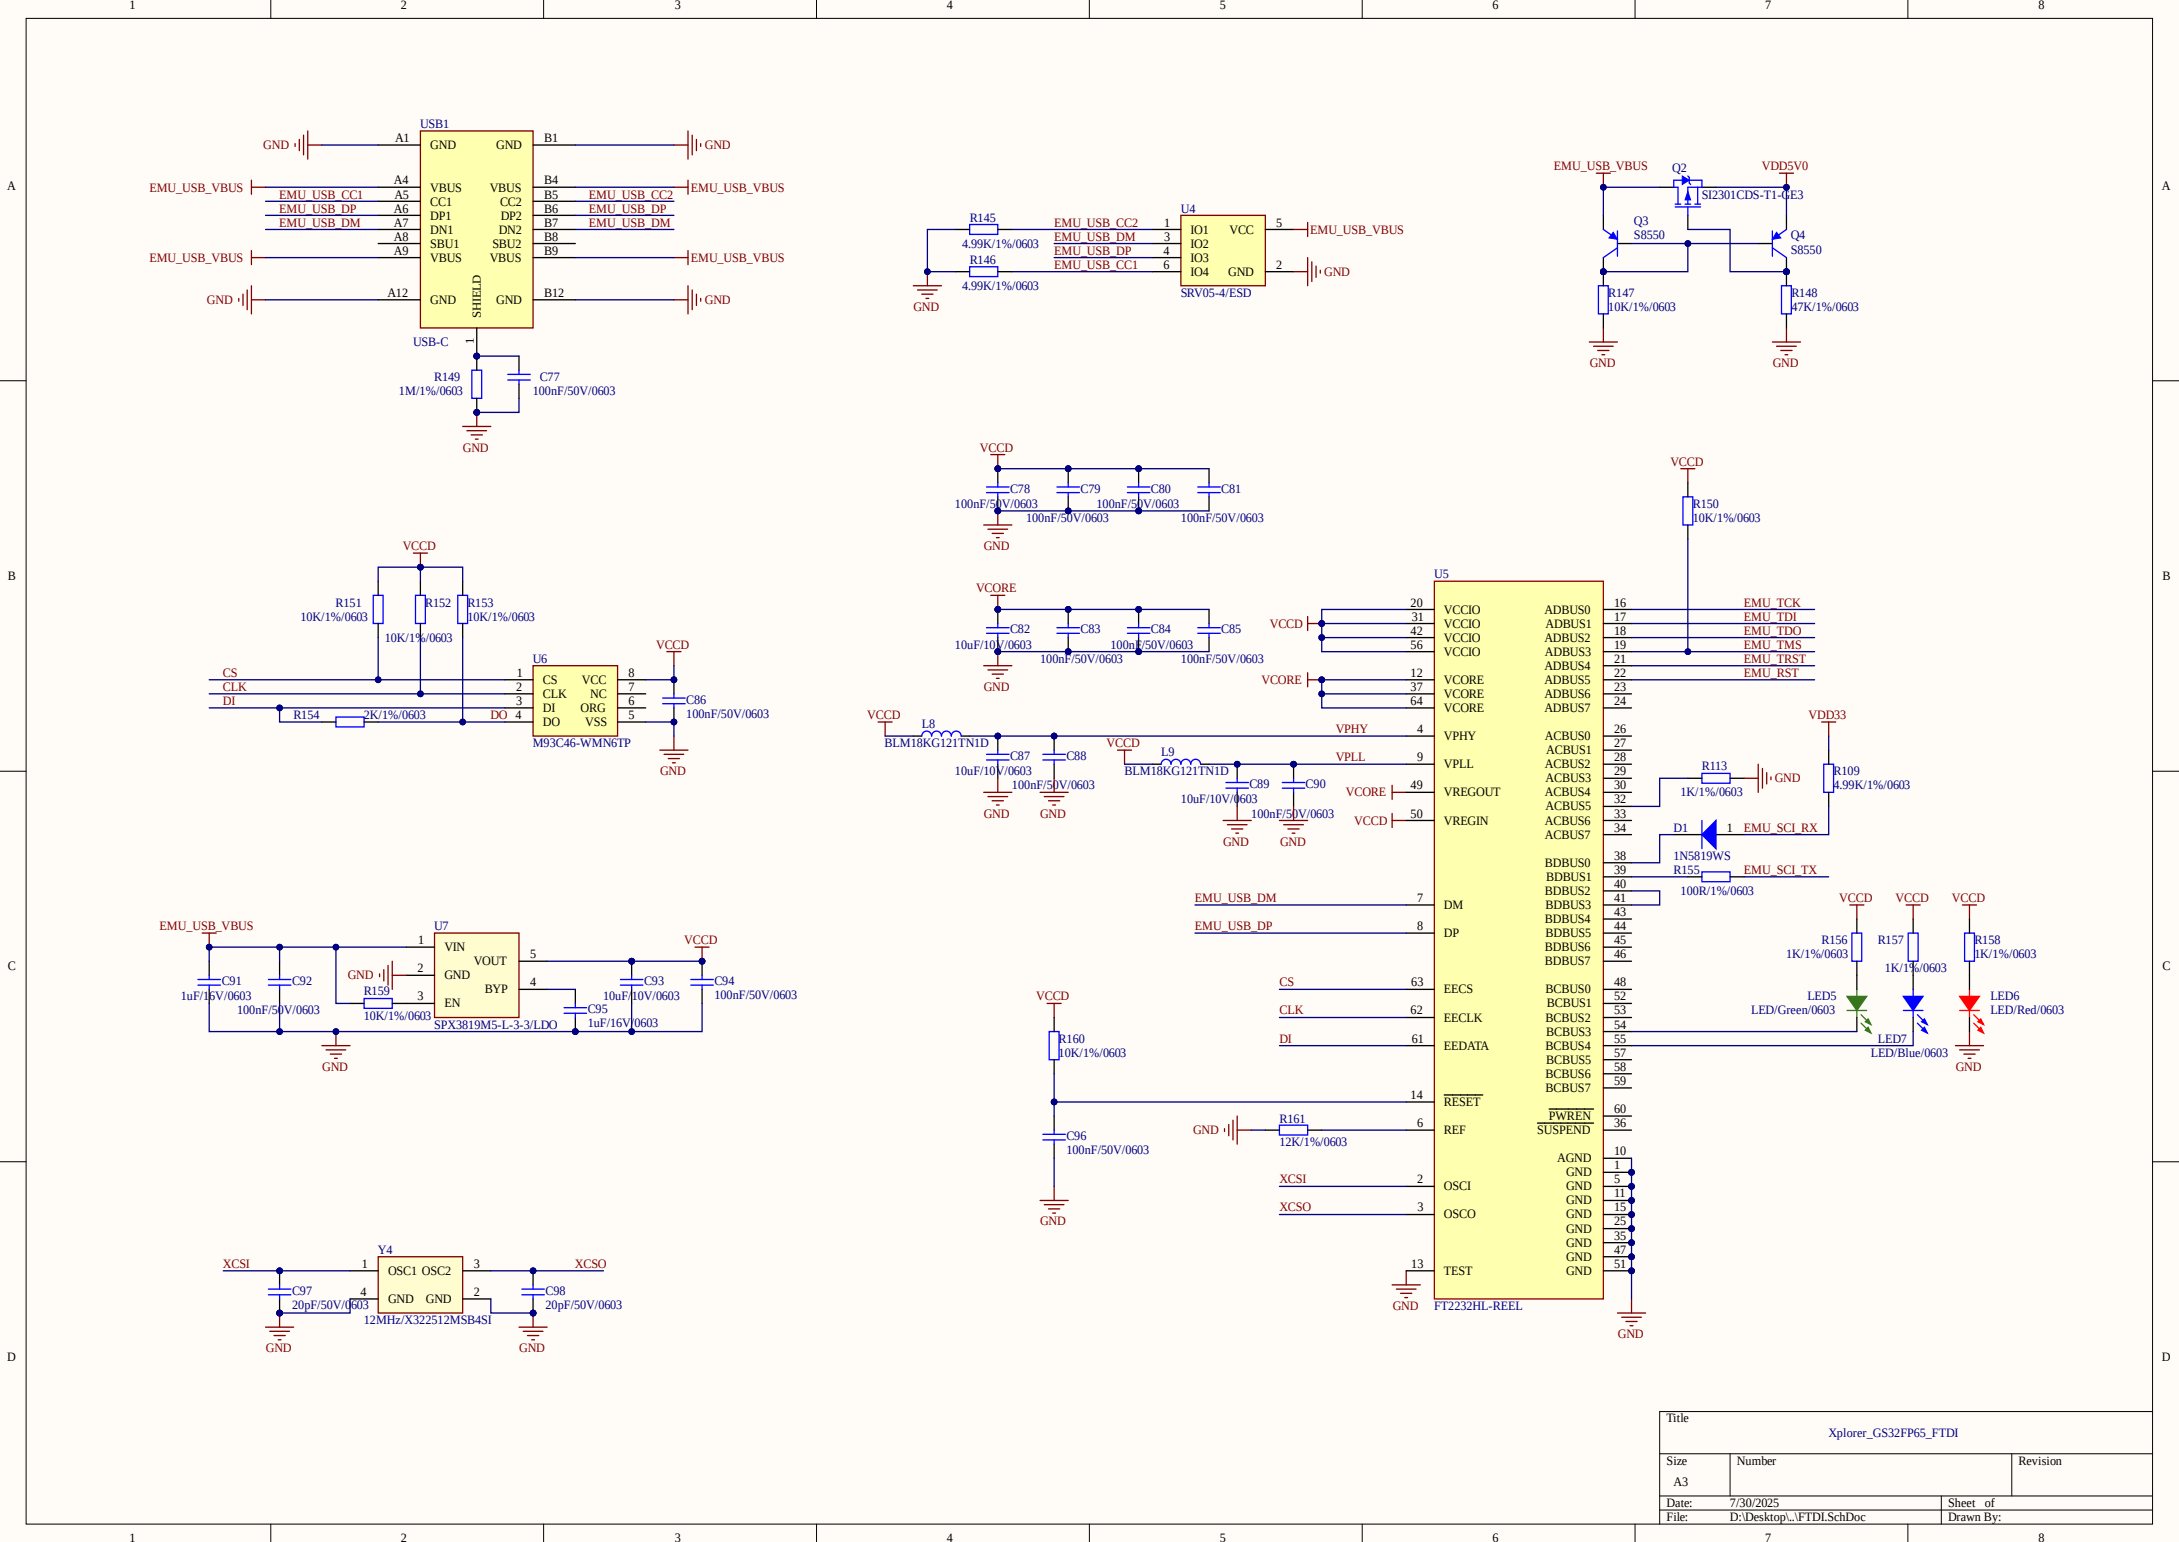

Title		
Xplorer_GS32FP65_FTDI		
Size	Number	Revision
A3		
Date:	7/30/2025	Sheet of
File:	D:\Desktop\...\FTDLSchDoc	Drawn By:

